
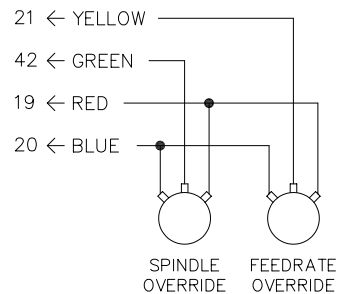
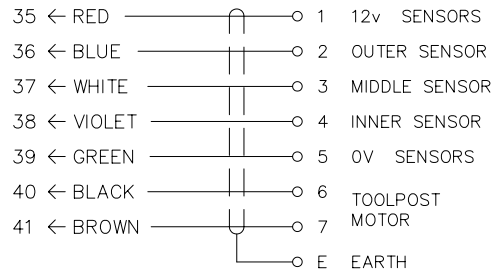



< 42 WAY CONNECTOR

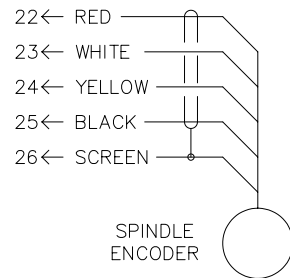

7 WAY + EARTH
TOOLPOST CONNECTOR
8 CORE SCREEN



REAR VIEW OF POTS
LEAVE 4 CORE
IN TRUNKING

1.5mm 3 CORE

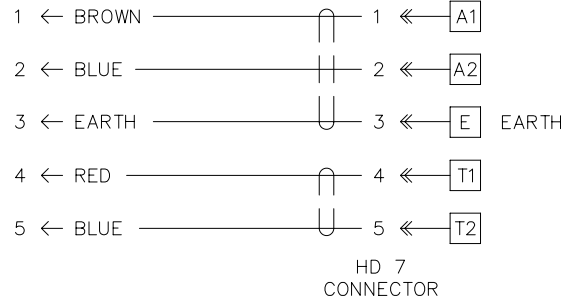


SPINDLE
MOTOR
TERMINALS

4 CORE SCREEN
7/0.2mm

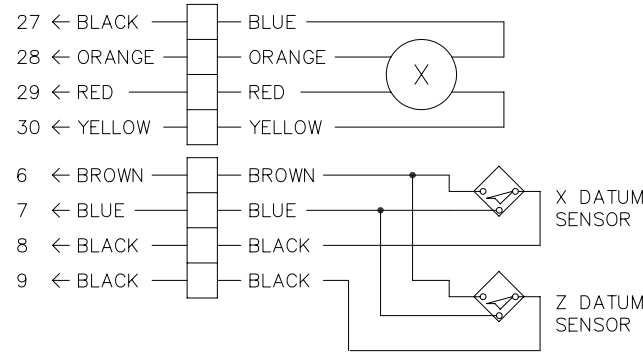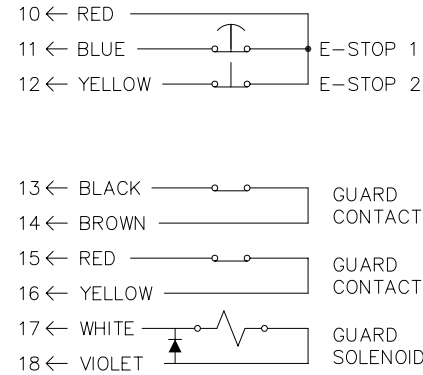


42 WAY HOUSING
MALE PINS
(BI 357F)

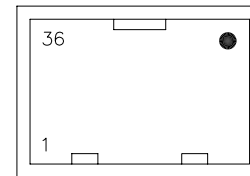


42
INSERT (BI 357G)
CODING PINS
(BI 356H)
7

GUARD
SWITCH
CONTACTS

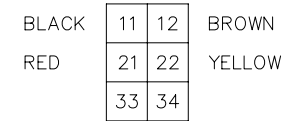

GUARD
SOLENOID

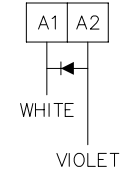

GUARD INTERLOCK
(REMOVE LINK 12 - 41)

IF GUARD INTERLOCK
NOT FITTED
CONNECT GUARD SWITCH
AS SHOWN BELOW



NOTE IF POWER GUARD IS
FITTED USE THE SWITCHES
WHICH ARE PART OF THE
PNEUMATIC CYLINDER
SEE SHEET 13

NOVATURN MOTOR AND DATUM WIRING	SHEET 11
	NOVATURN
	DENSTEP